


Installation Instructions

J Box connection for the Air Driven HVE


Make the connection as shown in the photo.

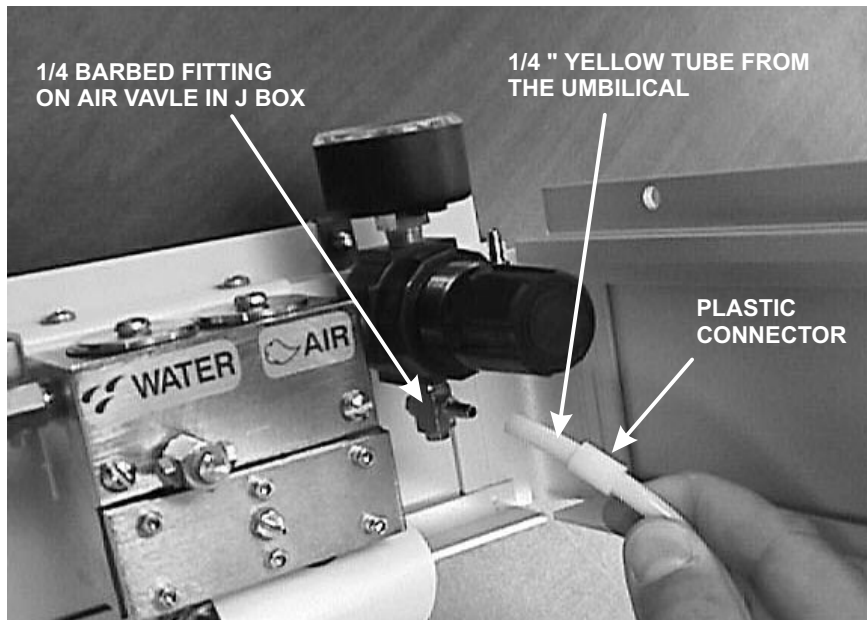

Installation Instructions

J Box connection for the Air Driven HVE

Make the connection as shown in the photo.

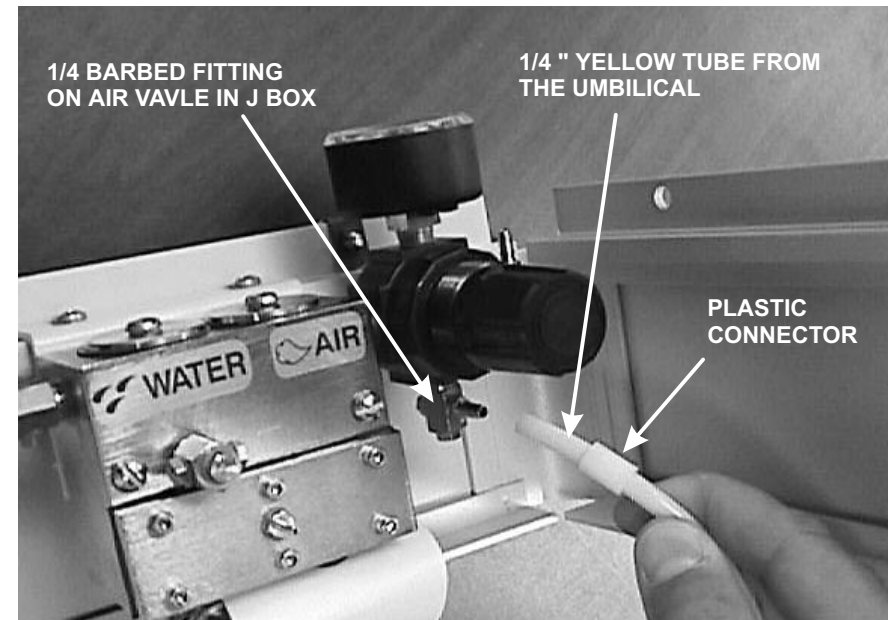

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542

TPW1803 Rev. B

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542

TPW1803 Rev. B